



by Acclaim lighting

1500 Cherokee Parkway, Suite 100, Acworth, GA 30102
P: 866-845-5451 • F: 866-816-6165
E: service@acclaim-lighting.com • www.acclaim-lighting.com

Item No . BW7155

INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.
Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.


GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

1. Thread cord cover (10) to the nipple (9) on bottom of fixture (7).
2. Remove the mount plate(3) from fixture(7).
3. Lift the mount plate to outlet box(1) so that the screw holes in outlet box line up with slots on mount plate. Mark spots at outer pilot holes for the plastic anchors to be installed.
4. Drill pilot holes on spots marked and insert plastic anchors(5).
5. Attach mount plate (3) to outlet box (1) using two box screws (4) provided.
(Note: if the box screws with the outlet box are too short, use the 8-32 x 1" screws provided in the mounting hardware package).
6. Attach outside of mount plate to plastic anchors with wood screws(6) provided.
7. Raise fixture (7) to the wall. Place fixture over the mount plate and secure with screws (7).
8. Raise shade (17) over socket (16) and secure with socket ring (18) .
9. Install a 75 watt medium base bulb (not included) into socket (16).
10. Place brackets(11) over the cord cover(10) at the desired height. Mark spots at pilot holes for the plastic anchors to be installed.
11. Drill pilot holes on spots marked and insert plastic anchors(13).
12. Attach brackets(11) to the plastic anchors with wood screws(12) provided.
13. Adjust the arm(15) to your desired angle. Plug power cord(14) into outlet and turn on at the switch.

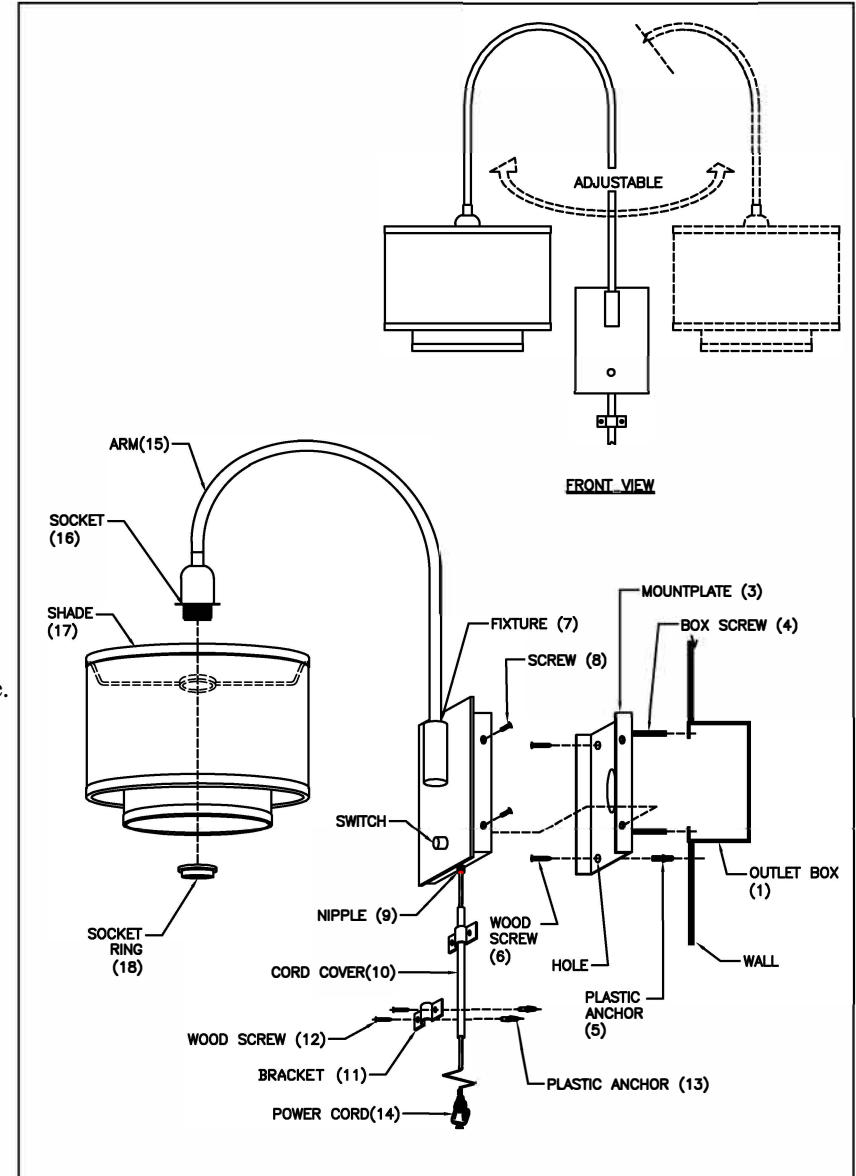

INSTALLATION IS NOW COMPLETED